NEXXTECH™ MC

8003100

LCD Travel Alarm Clock

OPERATING INSTRUCTIONS

FEATURES

1. Bright, blue backlight
2. Red flashing alarm light
3. Large Snooze/Light button
4. Protective cover for travelling
5. Easy-to set time and alarm controls
6. Requires two (2) “AAA” batteries (not included)

BATTERY

This model requires two “AAA” batteries (not included).
To install the batteries, remove the battery door located on the back of the clock. Insert two “AAA” batteries following the polarity symbols (+/-) marked on the inside of the battery compartment. Replace the battery door.
If the clock does not activate after inserting the batteries, check to make sure the battery is properly installed and/or check to make sure the battery is fresh.

If the clock does not operate, or steadily loses time, or if the alarm sounds weak, the batteries are low and should be replaced.

WARNING: Keep out of reach of children. If swallowed call your doctor immediately. DO NOT open battery, dispose of in fire, charge, install backwards or mix with used or other battery types. May explode or leak and cause personal injury.

SETTING THE TIME

Move the slide switch (B) to the “T. SET” position. Press the Hour button (C) continuously until the correct hour is displayed.
Note: “PM” will display in the upper left corner of the display for PM hours. Next, press the Minute button (D) continuously until the correct minutes are displayed.

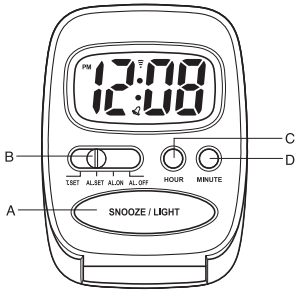

SETTING THE ALARM TIME

Move the slide switch (B) to the “AL. SET” position. Set the desired alarm time in the same way used to set the time. Press the Hour button (C) continuously until the correct hour is displayed. If the Alarm Time desired is a PM time, “PM” will be displayed in the upper left corner. Next, press the Minute button (D) continuously until the correct minutes are displayed.

TURNING ON THE ALARM
Move the slide switch (B) to the “AL. ON” position. The alarm bell icon will appear on the display. At the pre-set alarm time, the backlight will flash red and the alarm will sound. The alarm sound can be stopped by moving the slide switch (B) to “AL. OFF” position. If the alarm sound has been turned off, and you wish to have the alarm sound again at the pre-set alarm time the next day, simply move the slide switch (B) to the “AL. ON” position.

SNOOZE
The alarm sound can be stopped and repeated again four (4) minutes later when the Snooze/Light button (A) is depressed at the time the alarm sounds. The snooze function can be repeated again and again.

BLUE BACKLIGHT
The display can be illuminated at any time by pressing the Snooze/Light button (A), and will stay illuminated for four (4) seconds, then automatically fade. The display will also illuminate if you press the Snooze/Light button (A) at the time the alarm sounds.

LIMITED WARRANTY

Please Recycle

THE SOURCE WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of ninety (90) days from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or dealer and the product will be repaired without charge for parts and labour. The Source reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.
This warranty is only applicable to a product purchased through The Source company owned stores and dealers and to a product that is presented for repair in a country where The Source offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, province and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in the country of purchase.

Imported by:
The Source,
Barrie, Ontario, Canada, L4M 4W5
Manufactured in China

For product support please visit
www.thesource.ca

Limited Warranty

© 2012 The Source.
All Rights Reserved.

NEXXTECH™

8003100

Horloge de voyage ACL

MODE D'EMPLOI

CARACTÉRISTIQUES

1. Rétroéclairage bleu
2. Voyant d'alarme rouge clignotant
3. Grand bouton SNOOZE/LIGHT (rappel d'alarme/éclairage)
4. Couvercle protecteur pour le voyage
5. Commandes de réglage d'heure et d'alarme faciles à régler
6. Requiert deux (2) piles AAA (non comprises)

LES PILES

Ce modèle requiert 2 piles AAA (non comprises). Pour installer les piles, enlevez le couvercle du compartiment de piles situé sur le dos de l'horloge. Insérez deux piles AAA en respectant la polarité (+/-) indiquée dans le compartiment de piles. Remplacez le couvercle du compartiment de piles. Si l'horloge ne s'allume pas après avoir inséré les piles, vérifiez que les piles sont correctement installées et/ou vérifiez que les piles sont neuves.

Si l'horloge ne fonctionne pas, perd du temps, ou si l'alarme sonne faiblement, les piles sont faibles et doivent être remplacées.

AVERTISSEMENT: À conserver hors de la portée des enfants. En cas d'absorption, contactez votre médecin immédiatement. NE PAS jeter au feu, charger, installer à l'envers ou utiliser avec d'autres piles usagées ou de type différent. Risque d'explosion, de fuite et de blessures corporelles

COMMENT RÉGLER L'HEURE

Glissez l'interrupteur (B) à la position « T.SET ». Appuyez sur le bouton HOUR (C) continuellement jusqu'à l'heure correcte s'affiche.
Remarque : « PM » apparait sur le coin gauche supérieur de l'affichage pour les heures PM. Ensuite, appuyez sur le bouton MINUTE (D) continuellement jusqu'à les minutes correctes s'affichent.

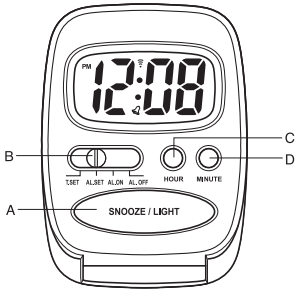

COMMENT RÉGLER L'ALARME

Glissez l'interrupteur (B) à la position « AL. SET ». Réglez l'heure d'alarme désirée de la même façon que vous avez réglée l'heure. Appuyez sur le bouton HOUR (C) jusqu'à l'heure correcte s'affiche.
Si l'heure d'alarme est PM, « PM » apparait sur le coin gauche supérieur de l'affichage. Ensuite, appuyez sur le bouton MINUTE (D) continuellement jusqu'à les minutes correctes s'affichent.

COMMENT ACTIVER L'ALARME
Glissez l'interrupteur (B) à la position « AL. ON ». L'icône cloche apparait sur l'affichage. À l'heure prévue, le rétroéclairage clignote rouge et l'alarme sonne. La sonnerie peut être arrêtée en glissant l'interrupteur (B) à la position « AL. OFF ». Si l'alarme a été arrêté, et vous voulez régler l'alarme de sonner le lendemain, simplement glissez l'interrupteur (B) à la position « AL. ON ».

RAPPEL D'ALARME
Vous pouvez activer le rappel d'alarme en appuyant sur le bouton SNOOZE/LIGHT (A) lorsque l'alarme sonne, le délai de rappel est quatre (4) minutes. La fonction de rappel d'alarme peut être répétée en continu.

RÉTROÉCLAIRAGE BLEU
L'affichage peut être allumé n'importe quand en appuyant sur le bouton SNOOZE/LIGHT (A) et reste allumé pendant quatre (4) secondes et s'éteint automatiquement. L'affichage s'allume aussi si vous appuyez sur le bouton SNOOZE/LIGHT lorsque l'alarme sonne.

GARANTIE LIMITÉE

Recyclez

GARANTIE LA SOURCE

La Source garantit ce produit contre tout vice de matière ou de fabrication pour une période de quatre-vingt-dix (90) jours à compter de la date d'achat. Au cours de cette période, vous n'avez qu'à retourner le produit, accompagné d'une preuve d'achat, à tout magasin ou détaillant La Source où il sera réparé sans frais pour les pièces et la main-d'oeuvre. La Source se réserve le droit d'imposer des frais de transport. La garantie ne s'applique pas aux produits endommagés suite à un mauvais usage ou à un accident.
La garantie s'applique uniquement à un produit acheté dans un magasin de la compagnie La Source ou chez un détaillant La Source et à un produit vendu dans le pays où l'on fait la demande de réparation au titre de la garantie. Bien que cette garantie n'accorde aucun droit particulier autre que ceux susmentionnés, vous pouvez avoir des droits statutaires additionnels qui varient selon le pays, l'état, la province ou l'entité gouvernementale où La Source exerce ses affaires. Cette garantie se conforme à tous les droits légaux que vous pourriez avoir dans le pays d'achat.

Importé par :
La Source,
Barrie, Ontario, Canada, L4M 4W5
Fabriqué en Chine

Pour le service à la clientèle, veuillez visiter
www.thesource.ca

Garantie Limitée

© 2012 La Source.
Tous droits réservés.